


ACSS for UPZ - mounting instructions

Tools required :

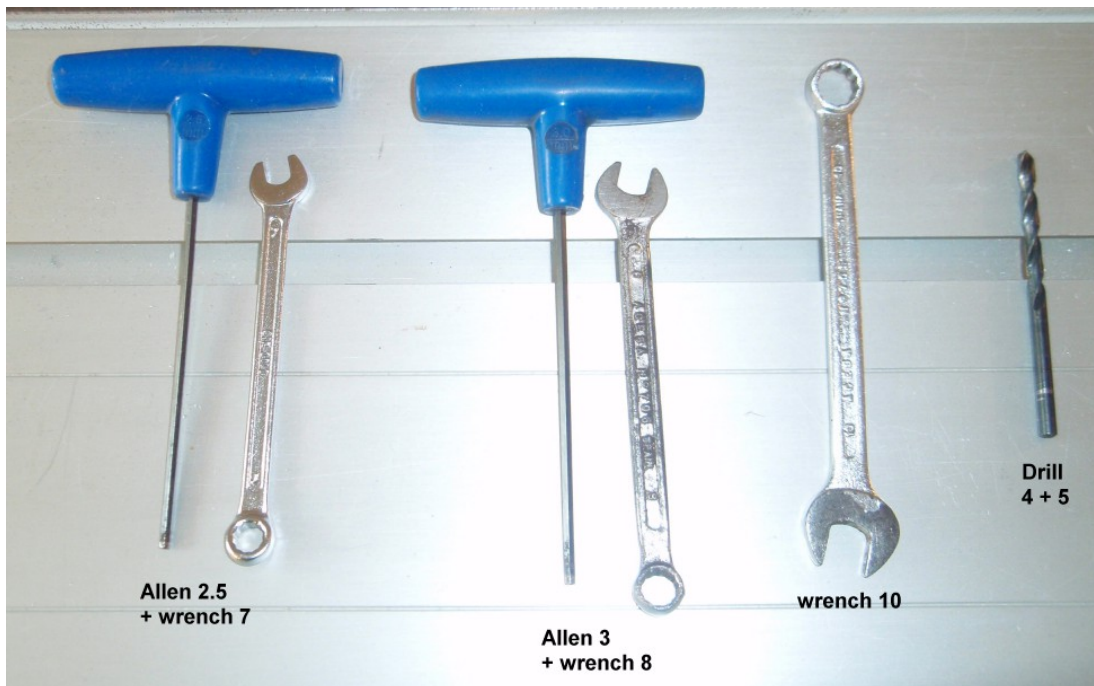


1 – Unmounting the original system

- Remove internal boot liner
- Undid the bottom bolt that holds the lower spring in
- Remove the bottom spring
- Bend the whole thing out a bit
- Then slip a screwdriver up into the upper part by the head of the bolt and pound it out without any damage to the plastic.





2 – positioning bottom part

- Apply the bottom part as below as possible, and mark the hole position.
- Drill a D5 hole. You can use the bottom part as a guide.
- Fix the bottom part with the screw.

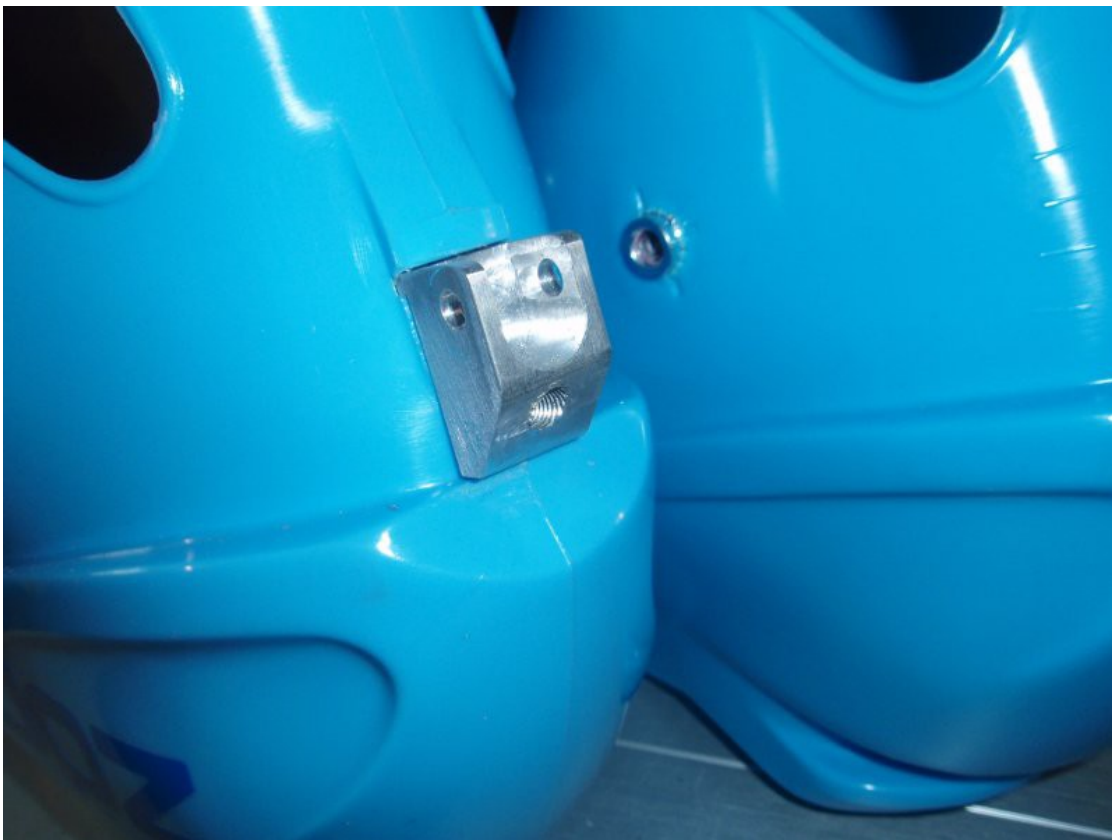

3 – positioning the angle iron.

- Mount the threaded rod with the backside spring (only with the bottom screw, without the nut)
- Put the boot in the "stand-by" position, as you are usually when standing up on the board.
- Position the angle iron in order the spring just touches the part.
- Mark the hole positions with a felt tip
- Drill 2 holes Diam 4.5 or 4mm to fasten the angle iron.
- Fasten the angle iron with the 2 flat head.

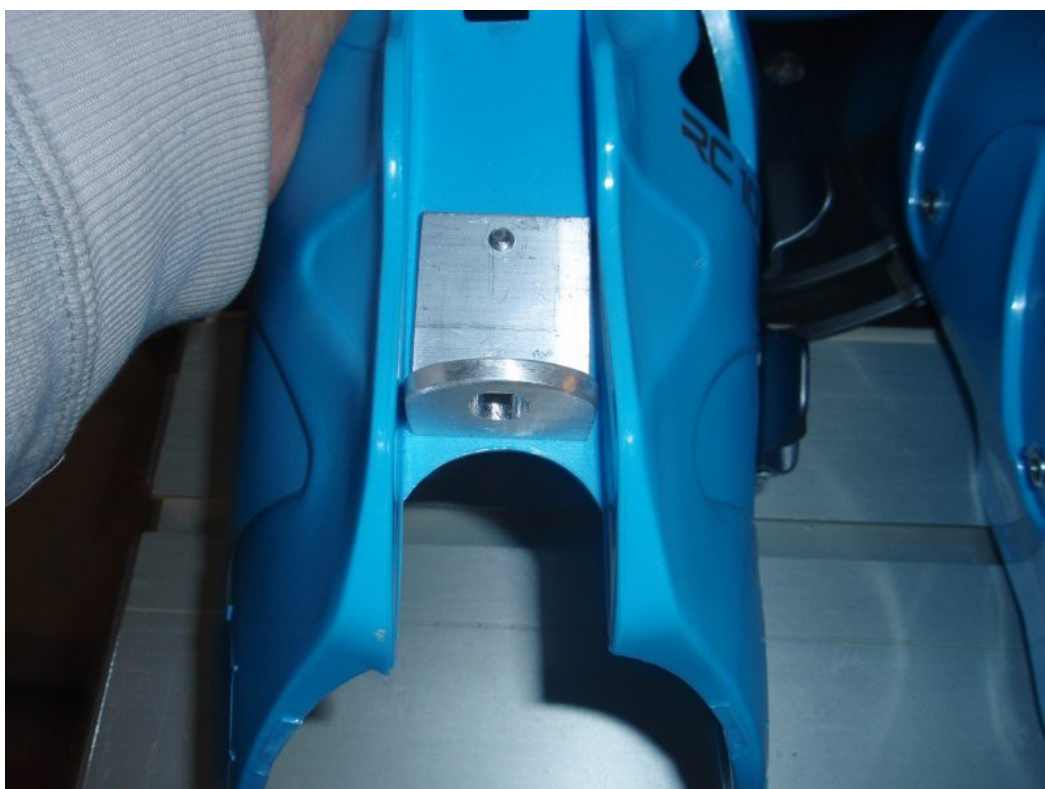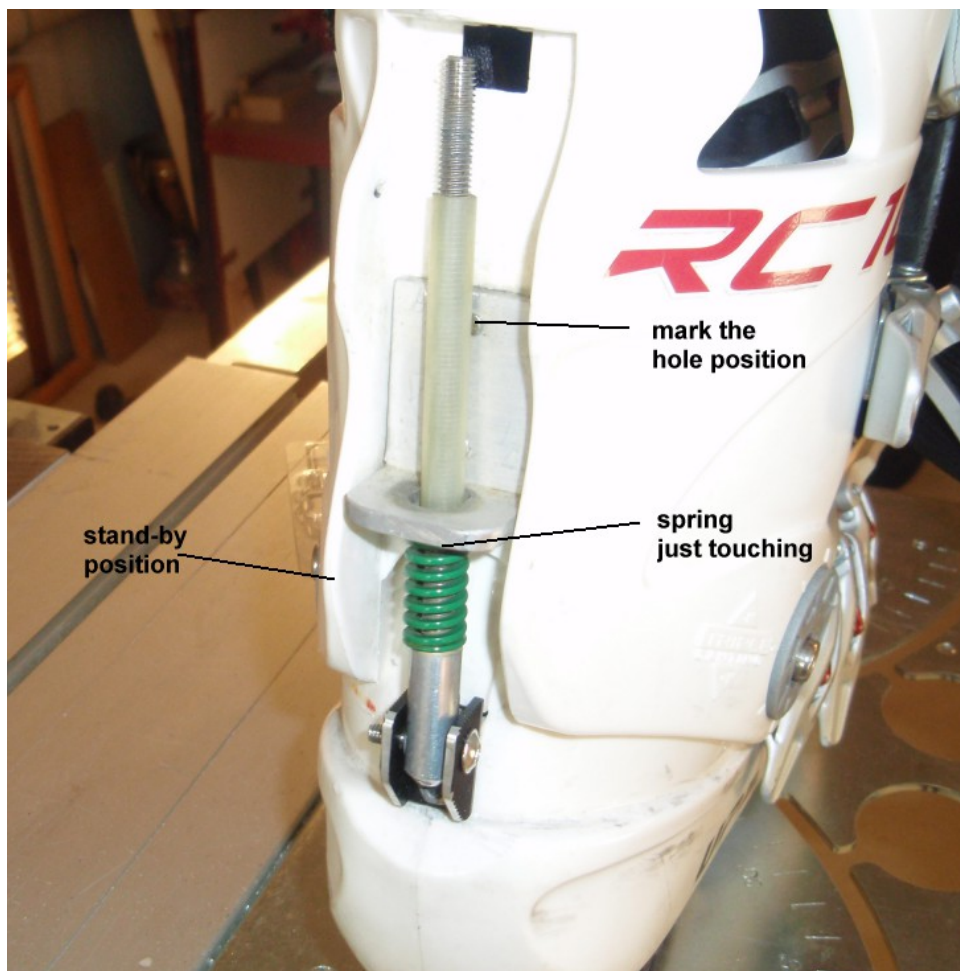

4 – Mounting and setting

- Mount the upper spring
- Mount the upper nut in position with the washer.
- The upper nut makes it possible to choose the prestressed and stiffness of the frontside position of the ACSS.
- Mount the bottom nut



System mounted.

